




## **Installer Registration**

User Guide

1. Go to https://datamarshall.au/#/home -----

← → C ( https://www.datamarshall.au/#/home

2. Click the "Sign Up" button --

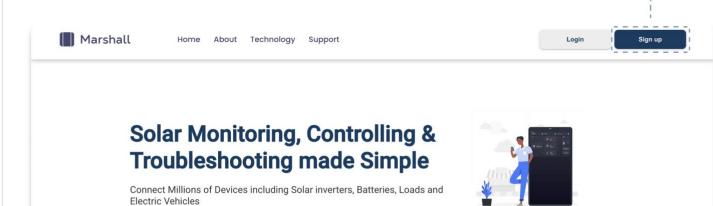



Sign up

#### **Equipment Manufacturers**

The Black box allows your devices to integrate with virtual power plants (VPPs), Distributed Energy Manufacturing Systems (DERMS) & offer other smart grid/network features.


Commissioning made easier. Marshall will enable you to configure devices remotely.

Marshall will enable you to configure devices remotely.





3. Read the Data & Privacy Policy

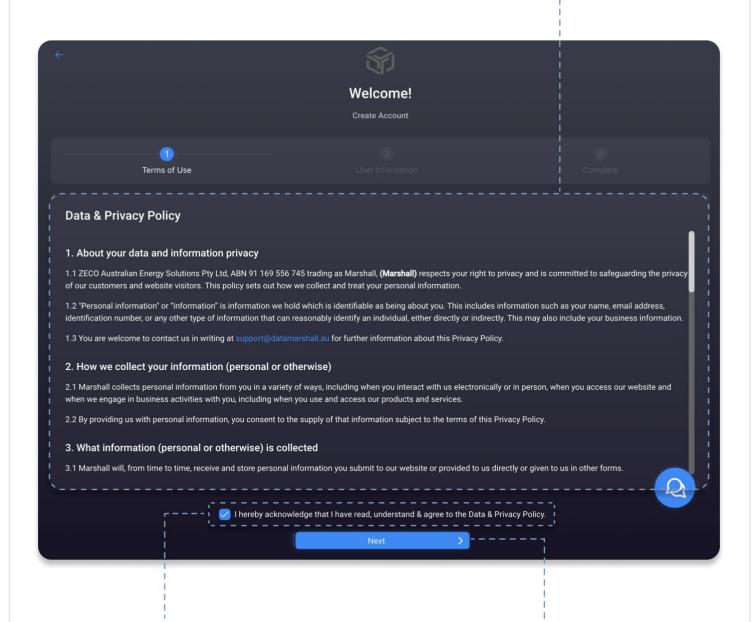


4. Click on the checkbox to acknowledge that you have read, understand and agree to the Data & Privacy Policy

5. Click the "Next" button

#### MARSHALL

6. Enter your address -----

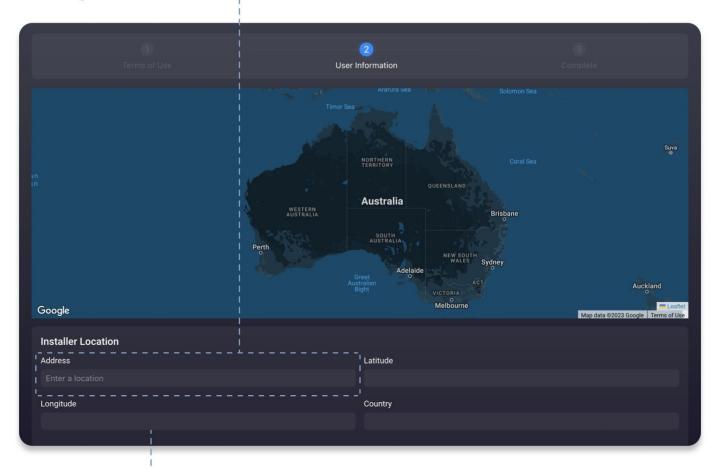

7. After adding your address, Latitude, Longitude and Country fields will be filled automatically


 8. Enter your Name, Email, Contact, and a Password




9. Click the "Next" button.



10. Check the entered details in the popup window and confirm your details

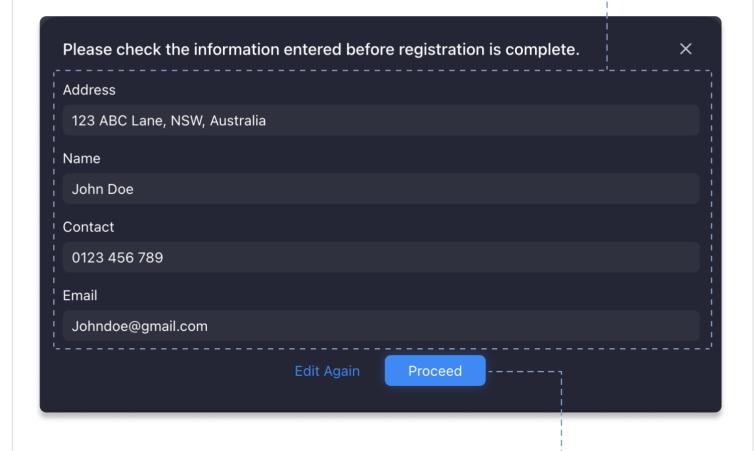

11. Click the "Proceed" button

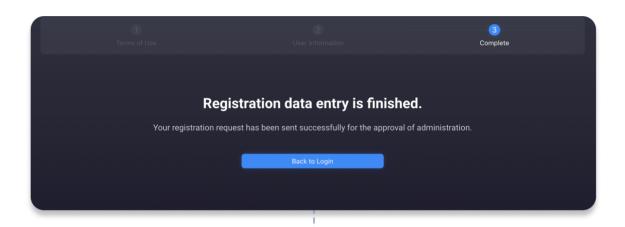

12. To complete the account creation, the administration must approve your registration request.

# MARSHALL

datamarshall.au

03 4422 4455

support@datamarshall.au

### **ZECO Energy**

6C/148 Chesterville Road, Moorabbin VIC Australia 3189

A.B.N 16 111 222 456