MARSHALL



2024

INSTALLATION GUIDE

Marshall Blackbox



Installation Guide

1.Single phase - Marshall Blackbox - BB-25-1



- 1 Neutral Bar
- 2 Ground
- Open the cover and connect the 5Amp CT, CT positive - on left and negative on right
- 4 Single phase power supply, 230V
- 5 Connect the coil active of the first contactor to the bottom of the breaker, the first contactor in the main switchboard always supplies the water heater.
- 6 Connect the coil active of the second contactor to the bottom of the breaker, any loads except EV charger can be connected to the second contactor in the main switchboard.
- 7 Connect the coil active of the third contactor to the bottom of the breaker, EV charger or other loads can be connected to the third contactor in the main switchboard.





2.Internet Setup




b Log in to the Marshall AP with the password: marshall123, and then a sign in page will pop up.

marshall_ap_	42349)	Sign in to marshall_ap_42349 : www.googleapis.cn
Password			
marshall123		4	
Show password			MARSHALL
			WiFi Setup Available Networks:
Advanced options		~	Password:
			Barlwan Newan Luit
	CANCEL	CONNECT	



N C	ZECO_Office_WiFi (Signal: 39)	۲
	Delta-09H20500006W0 (Signal: 36)	0
	ZECO_Office_WiFi_SE (Signal: 33)	0
	Delta-O9Y22200600WJ-1 (Signal: 30)	0
	marshall_ap_def54 (Signal: 28)	0
	Delta-OC52048000007 (Signal: 27)	0
	NextPayments (Signal: 24)	0
0	DIRECT-h3MFC-J4440 DW_BR69dc (Signal: 23)	0
	ARLO_VMB_1671401211 (Signal: 22)	0
	NP1x (Signal: 19)	0
	WiFi-4FEA71 (Signal: 19)	0
	OPTUS_484818N (Signal: 13)	0

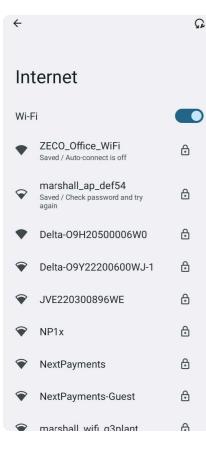

1. Click the 'Refresh Network List' button on the left.

С

2. A SSID will appear in the 'Networks' bar.

3. Click the 'Networks' bar to view the list of available Wi-Fi networks.

Networks: ZEC0_Office_WiFi (Signal: 39) Password:	
Refresh Network List	onnect
	_

d 1. Select your home Wi-Fi from the list.

2. Enter your Wi-Fi password and click 'Connect'.

3. A 'Trying to connect' message will appear.

e 1. Once connected, the sign-in page will close automatically.

2. The 'marshall_ap_xxxx' network will disappear from your smartphone's Wi-Fi settings.



3.Meter Configuration

a.Single phase



1. Long press the button twice to display '-SET-', then the CT ratio setting page.

2. Short press the button to adjust the CT ratio.

3. Ensure the 5Amp CT ratio matches the meter's CT ratio.

4. Long press the button to save and return to the energy reading page.



www.datamarshall.au

03 4422 4455

marshall@zeco.au

ZECO Energy

6C/148 Chesterville Road, Moorabbin VIC Australia 3189