## **Device Config** (Sigenergy)

2025 MARSHALL





Scan Here

for Commissioning







## **1.0 Sigenergy Device Configuration Access**



- 1. After commissioning the Sigenergy system, open the system in the mySigen app.
- 2. Tap 'Device', then select 'Sigen Hybrid Settings'.



## 2.0 Modbus Activation and Marshall Integration

Sigen Hybrid Sett Save	Sigen Hybrid Sett Save Connectivity > Maintenance > Operational Parameters RS485-1 Baud Rate 9600 ~ Modbus Settings Modbus Native (Slave) Address 1 Modbus TCP Server Enable ~ Rs485-1 Port Mode Modbus RTU Host ~	Sigen Hybrid Sett	
Connectivity > Maintenance > Operational Parameters RS485-1 Baud Rate 9600  Modbus Settings Modbus Native (Slave) Address 1  Modbus TCP Server Enable	Connectivity > Maintenance > Operational Parameters RS485-1 Baud Rate 9600  Modbus Settings Modbus Native (Slave) Address 1  Modbus TCP Server Enable  Rs485-1 Port Mode Modbus RTU Host		. Save
Maintenance > Operational Parameters RS485-1 Baud Rate 9600  Modbus Settings Modbus Native (Slave) Address 1  Modbus TCP Server Enable	Maintenance	Connectivity	>
Operational Parameters RS485-1 Baud Rate 9600 Modbus Settings Modbus Native (Slave) Address 1 Modbus TCP Server Enable	Operational Parameters RS485-1 Baud Rate 9600 Modbus Settings Modbus Native (Slave) Address 1 Modbus TCP Server Enable	Maintenance	>
RS485-1 Baud Rate 9600 Modbus Settings Modbus Native (Slave) Address 1 Modbus TCP Server Enable	RS485-1 Baud Rate 9600 Modbus Settings Modbus Native (Slave) Address 1 Modbus TCP Server Enable	Operational Parameters	
Modbus Settings Modbus Native (Slave) Address 1 Modbus TCP Server Enable	Modbus Settings Modbus Native (Slave) Address 1 Modbus TCP Server Enable Rs485-1 Port Mode Modbus RTU Host	RS485-1 Baud Rate 9600	$\odot$
Modbus Native (Slave) Address 1 Modbus TCP Server Enable	Modbus Native (Slave) Address 1 Modbus TCP Server Enable Rs485-1 Port Mode Modbus RTU Host	Nodbus Settings	
Modbus TCP Server Enable	Modbus TCP Server Enable Rs485-1 Port Mode Modbus RTU Host	Modbus Native (Slave) Address 1	5
	Rs485-1 Port Mode Modbus RTU Host	Modbus TCP Server Enable	
Rs485-1 Port Mode Modbus RTU Host		Rs485-1 Port Mode Modbus RTU Host	$\bigcirc$

- --- 3. In the Sigen Hybrid Settings page, toggle 'Modbus TCP Server Enable' ON under the Modbus Settings section.
  - 4. Connect the Marshall device to the same network as the inverter.
  - 5. Commission the system on Datamarshall.



datamarshall.au

03 4422 4455

support@datamarshall.au

## **ZECO Energy**

6C/148 Chesterville Road, Moorabbin VIC Australia 3189

A.B.N 16 111 222 456